


BREAKDOWN BNT-N

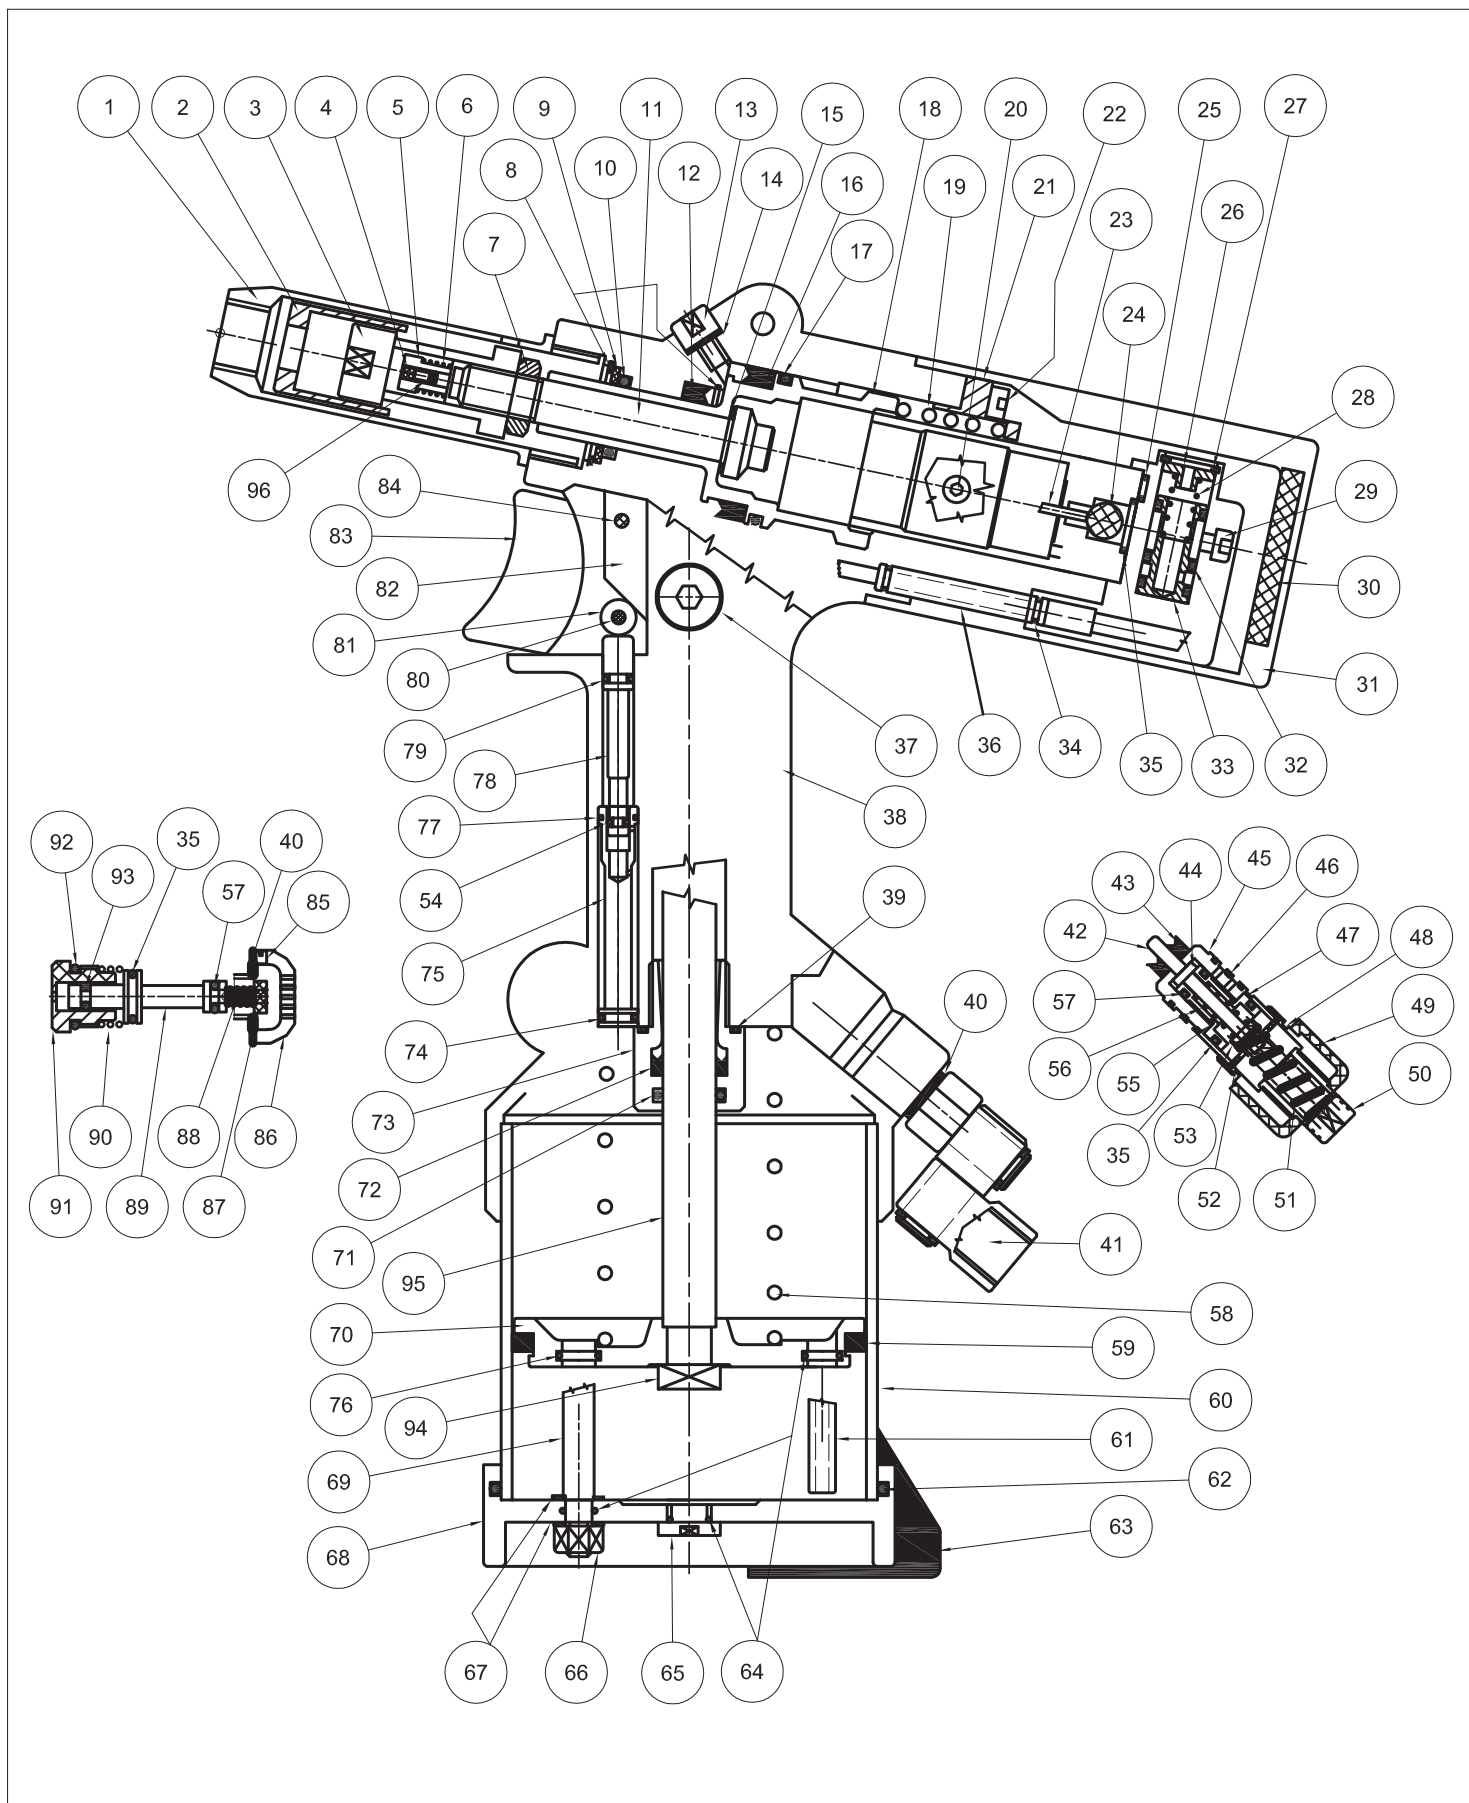

OPTIONAL	KIT FOR INSERT NUTS
05BNTN00157	M-3
05BNTN00158	M-4
05BNTN00159	M-5
05BNTN00160	M-6
05BNTN00161	M-8
05BNTN00162	M-10
05BNTN00167	UNC 6-32
05BNTN00168	UNC 8-32
05BNTN00184	UNC 10-32
05BNTN00169	UNC 1/4-20
05BNTN00170	UNC 5/16-18
05BNTN00171	UNC 3/8-16

OPTIONAL	KIT FOR STUD NUTS
05BNTN00163	M-4
05BNTN00164	M-5
05BNTN00165	M-6
05BNTN00166 *	M-8

* Kit M8 requires a special mandrel holder supplied with the Kit.

N°	REFERENCE	DESCRIPTION
----	-----------	-------------

1	05BNTN00001	NOSEPIECE HOLDER
2	05BNTN00002	MANDREL HOLDER
3	05BNTN00003	MANDREL FIXING CONNECTOR
4	05BNTN00004	DIPSTICK
5	05BNTN00005	ROD HOLDER
6	05BNTN00006	ROD HOLDER SPRING
7	05BNTN00007	LOCK NUT
8	05BNTN00008	GROUP 2 UNITS
9	05BNTN00009	WASHER 3 UNITS
10	05BNTN00010	O-RING 3 UNITS TRACTION SHIRT
11	05BNTN00011	MOVEMENT PIVOT
12	05BNTN00012	PACKAGING
13	05BNTN00013	BLEED SCREW M5
14	05BNTN00014	BLEED SCREW GASKET
15	05BNTN00015	ADJUSTMENT RING
16	05BNTN00016	PACKAGING
17	05BNTN00017	DRIVE SHAFT O-RING
18	05BNTN00018	HYDRAULIC PISTON
19	05BNTN00019	DOCK
20	05BNTN00020	SCREW 2 UNITS
21	05BNTN00021	STOP RACE
22	05BNTN00022	SCREW M4 4 UNITS
23	05BNTN00023	PUSHROD
24	05BNTN00024	CLOSING BALL
25	05BNTN00025	O-RING (DISTRIBUTOR KIT)
26	05BNTN00026	REAR DISTRIBUTOR (DISTRIBUTOR KIT)
27	05BNTN00027	GROUP (DISTRIBUTOR KIT)
28	05BNTN00028	SPRING (DISTRIBUTOR KIT)
29	05BNTN00029	SCREW M4 2 UNITS (DISTRIBUTOR KIT)
30	05BNTN00030	MUFFLER
31	05BNTN00031	BACK CASE
32	05BNTN00032	O-RING 3 UNITS (DISTRIBUTOR KIT)
33	05BNTN00033	PISTON (DISTRIBUTOR KIT)
34	05BNTN00034	O-RING 4 UNITS (DISTRIBUTOR KIT)
35	05BNTN00035	O-RING 3 UNITS (DISTRIBUTOR-PRESSURE VALVE KIT)
36	05BNTN00036	AIR SUPPLY TUBES 2 PCS
37	05BNTN00037	SCREW + OIL SEAL
38	05BNTN00038	PLASTIC HANDLE
39	05BNTN00039	HANDLE PLUG GASKET
40	05BNTN00040	AIR INLET WASHER 2 UNITS
41	05BNTN00041	AIR INLET ASSEMBLY
42	05BNTN00042	ROD (PRESSURE VALVE KIT)
43	05BNTN00043	GASKET (PRESSURE VALVE KIT)
44	05BNTN00044	PISTON (PRESSURE VALVE KIT)
45	05BNTN00045	FRONT HOUSING (PRESSURE VALVE KIT)
46	05BNTN00046	O-RING 3 UNITS (PRESSURE VALVE KIT)
47	05BNTN00047	CYLINDER (PRESSURE VALVE KIT)
48	05BNTN00048	REAR HOUSING (PRESSURE VALVE KIT)

N°	REFERENCE	DESCRIPTION
----	-----------	-------------

49	05BNTN00049	PROTECTION (PRESSURE VALVE KIT)
50	05BNTN00050	PRESSURE REGULATOR (PRESSURE VALVE KIT)
51	05BNTN00051	SPRING (PRESSURE VALVE KIT)
52	05BNTN00052	RING (PRESSURE VALVE KIT)
53	05BNTN00053	SPRING RETAINER (PRESSURE VALVE KIT)
54	05BNTN00054	O-RING 2 UNITS (AIR VESSEL VALVE KIT)
55	05BNTN00055	O-RING 2 UNITS (PRESSURE VALVE KIT)
56	05BNTN00056	SPRING (PRESSURE VALVE KIT)
57	05BNTN00057	O-RING 2 UNITS
58	05BNTN00058	DOCK
59	05BNTN00059	O-RING GASKET PLUG
60	05BNTN00060	PNEUMATIC CUP
61	05BNTN00061	AIR SUPPLY TUBE
62	05BNTN00062	O-RING
63	05BNTN00063	RUBBER BASE
64	05BNTN00064	O-RING 4 UNITS
65	05BNTN00065	GLASS PLUG
66	05BNTN00066	NUT 2 UNITS
67	05BNTN00067	WASHER 4 UNITS
68	05BNTN00068	PNEUMATIC CUP COVER
69	05BNTN00069	THREADED STAY 2 UNITS
70	05BNTN00070	PNEUMATIC PISTON
71	05BNTN00071	O-RING PLUG HANDLE
72	05BNTN00072	PACKAGING
73	05BNTN00073	PISTON SHAFT GUIDE
74	05BNTN00074	O-RING (TRIGGER VALVE KIT)
75	05BNTN00075	TRIGGER BAR SHIRT (TRIGGER VALVE KIT)
76	05BNTN00076	O-RING 2 UNITS THREADED STRAP
77	05BNTN00077	O-RING (TRIGGER VALVE KIT)
78	05BNTN00078	TRIGGER BAR (TRIGGER VALVE KIT)
79	05BNTN00079	O-RING (TRIGGER VALVE KIT)
80	05BNTN00080	ROLLER PIN (TRIGGER KIT)
81	05BNTN00081	ROLLER (TRIGGER KIT)
82	05BNTN00082	THRUST WEDGE (TRIGGER KIT)
83	05BNTN00083	TRIGGER (TRIGGER KIT)
84	05BNTN00084	PIVOT PIN (TRIGGER KIT)
85	05BNTN00085	THREADED PIN
86	05BNTN00086	DEFLECTOR
87	05BNTN00087	MUFFLER
88	05BNTN00088	SPRING (AIR VESSEL VALVE KIT)
89	05BNTN00089	VALVE PISTON (AIR VESSEL VALVE KIT)
90	05BNTN00090	SPRING (AIR VESSEL VALVE KIT)
91	05BNTN00091	ADAPTER NUT
92	05BNTN00092	O-RING (AIR VESSEL VALVE KIT)
93	05BNTN00093	O-RING (AIR VESSEL VALVE KIT)
94	05BNTN00094	SCREW
95	05BNTN00095	PNEUMATIC PISTON SHAFT
96	05BNTN00096	PRISONER ROD